 


# Polycom® KIRK® 4020/4040

 
 
 


## User Guide



## **Congratulations on your new KIRK handset**

Your new KIRK handset will provide you with the greatest possible degree of flexibility and mobility due to high battery capacity, low weight, practical size and design.



## Contents:

1. Construction .....	4	7.5.4 Remove subscription.....	26
2. Batter installation .....	5	7.5.5 Change startup te t.....	26
3. Charging .....	6	7.6 Batter capacit .....	27
4. Ke functions .....	7	7.7 Redial .....	28
5. Turning the handset ON/OFF .....	9	7.8 Book.....	30
6. Making a call.....	10	7.9 E ternal services.....	32
6.1 Receiving calls .....	12	7.10 MSF Functions .....	33
6.2 During conversation .....	13	7.11 Mail/Te tmessages.....	34
6.2.1 Volume regulation.....	13	7.12 Speed dial .....	38
6.2.2 Microphone mute.....	13	8. Date and Time function .....	39
6.2.3 Transferring the call to another handset.....	13	9. Language .....	40
7. Menu structure .....	14	10. Advanced settings.....	41
7.1 Using the alphanumeric ke board.....	15	11. Shortcuts .....	44
7.2 The ke functions.....	16	12. Information .....	45
7.3 Profile set up .....	17	12.1 Error tree .....	45
7.4 Profile functions .....	19	12.2 Error information .....	46
7.5 Menu subscription and login .....	21	12.3 Warrant .....	46
7.5.1 Create subscription .....	22	12.4 Technical Information .....	47
7.5.2 Login.....	23	12.5 International Regulator and Product Information .....	48
7.5.3 Auto login.....	24	12.5.1 Important Safet Instructions.....	52
		12.5.2 Limited Warrant .....	57

4

# 1. Construction

MENU ke

Ke for internal calls  
(not used on KIRK Wireless Server)

Loud speaking (onl KIRK 4040)

Ke board LOCK  
(Menu\*)

Recall ke  
(MAIL ke )

SILENT (Menu#)

Headset Connector  
(onl KIRK 4040)

Displa with backlight

Left arrow ke , Redial Menu  
from standb te t

LED

Alarm ke

 
Right arrow ke , save number.  
Phone book Menu from stand-  
b te t

Volume up/down

ON/OFF HOOK ke -  
also used as turn on ke

CONFIRMATION ke -  
MUTE microphone.  
MUTE ringer when ringing.  
Long ke press turns off






## 2. Battery installation

The battery is connected to the handset when it is shipped from the factory. To change the battery, you must unscrew the plate on the rear of the handset to access the battery compartment.




To remove the battery cover, use a normal screw driver. Insert it into the small crack behind the blind cover and break to open the handset.

 **Please note:** The product label, including the CE logo, can be found in the battery compartment.



### 3. Charging

 During normal operation, it takes approx 3 1/2 hours to charge the handset from full discharged to its full capacity. Place the handset in the charger. When the handset is turned on, the display shows the charging status in line 3. For correct charging be sure the room temperature is between 0 C and 25 C. Do not place the handset in direct sunlight. The battery has a built-in heat sensor which will stop charging if the battery temperature is too high. It is necessary to recharge the battery when the display shows BATTERY LOW, or if it can not be turned on. The LED flashes at a low frequency while charging and lights constantly when the charging is finished. The display goes back to normal mode when fully charged.



When the handset is placed in the charger it will not vibrate, and B-answer is inactive. If the battery is fully discharged, up to 10 min. may pass before charging begins and the handset can be turned on. When the charger begins the charging, status is shown in the 3rd line of the display and the LED flashes slowly.


## 4. Key Functions

The handset has 21 keys:

Two keys are placed at the right side for volume control. Press upper or lower key to change the volume. Each key-press turns volume one step up/down.

- MENU - Go to menu structure or exits the menu structure. (Escape or NO )
- < , REDIAL - Menu: left, Cursor left, after a digit: delete last digit. Long press: delete all  
From standby to: Redial Menu
- > , BOOK - Menu: right, Cursor right, After a digit: Store number in telephone book  
From standby to: Telephone book read
- ✓ , MUTE - Confirmation ( YES ) or jump to next level in the menu. In off hook: Mute microphone  
In on hook: Mute ringer. Long key press turns the handset OFF


8


- INT - If residential systems: Internal calls off hook  
(not used on KIRK Wireless Server)  
Turns loudspeaking on and off in off hook (only KIRK 4040)
- R - If off hook: Recall. If on hook: Read or write message
-  - On hook/off hook and turn ON
- \* - \* (Change from pulse to DTMF on KIRK Wireless Server), Long = pause (-), extra long: change from pulse to DTMF (a T appears in the display, GAP standard)
- 0-9 - Digits or letters in alphanumeric mode (names and messages)
- \* - \*, Choose uppercase or lowercase letters in alphanumeric mode



## 5. Turning the handset ON/OFF


ON: Press -ke for 1/2 second.

When the handset is turned on the  symbol is shown in the lower left corner of the display, if the handset is subscribed to a system. (For subscription, see Chap. 7.5.1)

OFF: Press the -ke (MUTE) for 3 seconds

**Please note:** When the handset has been outside the coverage area, it can take up to 30 seconds before the handset is back on the system after re-entering the coverage area.

## 6. Making a call

For making or receiving calls the handset has to be subscribed to a system (☎ shown in display ) (see Chap. 7.5.1). Press the -key, the -icon in the display will flash until connection is established. Dial the number.

### Pre-dial:

Press the number to dial (long press on \* will make a pause, if necessary). Press the -key, the -icon will flash until the connection is established.

### Telephone book:

Press the >-key (BOOK) to enter the telephone book.

Search for the number either by using the < or >-keys or by pressing the first letter in the name by using the digits 1-9 (see Chap. 7.2).

Press the -key, the -icon will flash until the connection is established.

**Redial:**

Redial / CLIP (CLIP = Calling Line Identification Presentation) stack:

Press the <-ke (REDIAL) to enter the redial/CLIP stack.


Search for the number b using the < or >-ke s, redial numbers are marked with REDIAL or name and clip numbers are marked either with CLIP or the name of the person who called and the LED is on.

Press the -ke , the -icon will flash until the connection is established.

Using the handset in residential systems: (not on KIRK Wireless Server)

Internal call post-dial:

Press the INT-ke , the -icon in the display will flash.

Dial the number of another handset on the base station, the -icon will flash until the connection is established.

Internal call pre-dial: (not on KIRK Wireless Server)

Press the number of another handset on the base station.

Press the INT-ke , the -icon will flash until the connection is established.

**Please note:** If the Date and Time function is supported, then date and time of the incoming or outgoing call is shown in the CLIP/Redial stack on the 4th line of the display. See Chap. 8 for more information.

**Speed dial:**

 
See Chap. 7.12 and Chap. 10 for more information about speed dialing.

## 6.1. Receiving calls

If the phone rings, the call can be answered by pressing the -key.

When ringing the LED flashes fast, and the display shows the CLIP (if presented). If it is an external call (or if no CLIP) the display shows INCOMING CALL.

It is possible to stop the ring signal without answering the call. Press MUTE (✓) and the ring signal is muted. Display shows: RINGER MUTED.



## **6.2 During conversation**

### **6.2.1 Volume regulation:**

Use the two keys placed at the right side of the handset for volume control.

### **6.2.2 Microphone mute:**

 
Press the ✓-key (MUTE), MIC. MUTED is showed in the display.

Press the ✓-key (MUTE) to enable the microphone again.

### **6.2.3 Transferring the call to another handset:**

Press the R-key, and dial new number.


Press the -key and the call is transferred to the other handset.



## 7. Menu structure

Pressing the MENU-ke , enters or e its the menu structure. It has to be used if a NO or CLEAR is wanted in the menu structure.

Pressing the ✓-ke , jumps to a lower level in the menu. When the lowest menu level is reached, it will store the setting and jump to a higher level. It has to be used if a YES is wanted.

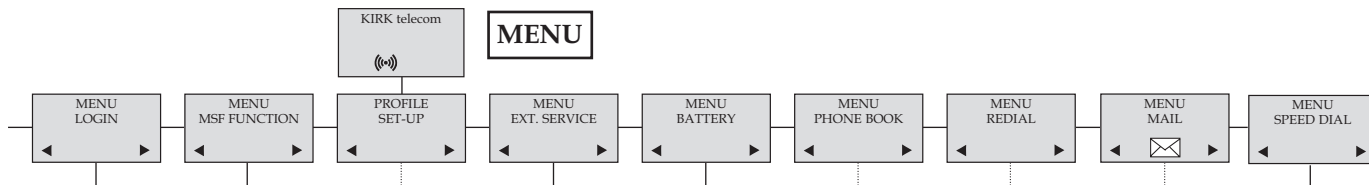

The Phone book Menu, Redial Menu and Mail Menu can be accessed directl . The Phone book Menu b pressing the >-ke (BOOK), the Redial Menu b pressing the <-ke (REDIAL), and the Mail Menu b pressing the R-ke (MAIL).

## 7.1 Using the alphanumeric keyboard

The normal dialling keys (0-9) are used for writing the name to be placed in the telephone book. By pressing the keys a certain number of times the related letters or digits will appear in the display. Spaces are made by using the 0-key. Key \* changes between uppercase and lowercase letters. The arrows will move the cursor. Left arrow is also used for deleting (hold for 1 sec.) = delete. New letters can be inserted.

Change of key press and pauses lasting more than 1 second automatically moves the cursor to next position.

**Please note:** 4th line of the display shows the possible alphanumeric keys.

## 7.2 The key functions

 
 
 
Ke	Capital letter	Small letter
1	? ! 1 - + * / = & ( ) %	? ! 1 - + * / = & ( ) %
2	A B C 2	a b c 2
3	D E F 3	d e f 3
4	G H I 4	g h i 4
5	J K L 5	j k l 5
6	M N O 6	m n o 6
7	P Q R S 7	p q r s 7
8	T U V 8	t u v 8
9	W X Y Z 9	w 9
0	[Space] , . 0 : ; _	[Space] , . 0 : ; _
*	A → a	A → a
#	# @ E \$ < > [ \ ]	# @ E \$ < > [ \ ]






### 7.3 Profile set-up

To set-up the handset press MENU. You are now able to switch between the different settings. Press ✓ when you find the setting you wish to change (or see). Change the setting according to your needs, confirm with ✓ and you automatically go to the next setting. Press MENU to finalise the setup.



## Profile set-up (fig)

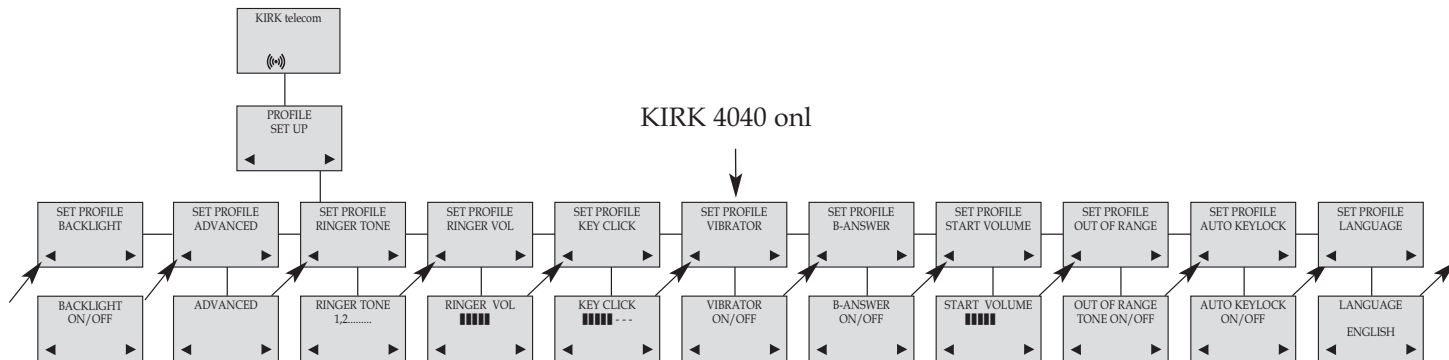

## 7.4 Profile functions

**RINGERTONE:** Scroll through the 9 different ringtones using < and >. Confirm with ✓.

**RINGER VOL:** Turn the volume up and down using < and >. Confirm with ✓.

**KEY CLICK:** Turn the volume up and down using < and >. Confirm with ✓.

**VIBRATOR:** Can be turned on/off using < and >. Confirm with ✓ (vibrator onl works on KIRK 4040).

**B-ANSWER:** Can be turned on/off using < and >. Confirm with ✓. When turned on, the telephone automaticall goes off hook when ringing. If subscribed to a KIRK solution it automaticall goes on hook when calls are terminated.

B-answer is inactive when handset is placed in the charger.

**REMARK:** Automatic on-hook is onl reliable under defined conditions related to the interface settings between the KIRK Wireless Server and the PBX.

**START VOL:** Start volume can be adjusted using < and >. Confirm with ✓.

**OUT OF RANGE:** The out of range indication can be turned on/off using < and >. Confirm with ✓. With the out of range indicator turned on, a beep will appear when the telephone is moving out of range of the base station, and **OUT OF RANGE** will appear in the display.


**AUTO KEYLOCK:** The auto key lock function can be turned on/off using < and >. Confirm with ✓. With auto key lock turned on the handset will automatically lock the keys after 30 seconds. Press **MENU \*** to activate the keys again.

**LANGUAGE:** see Chap. 9.

**BACKLIGHT:** Can be turned on/off using < and >. Confirm with ✓.

**ADVANCED:** see Chap. 10.

## 7.5 Menu subscription and login

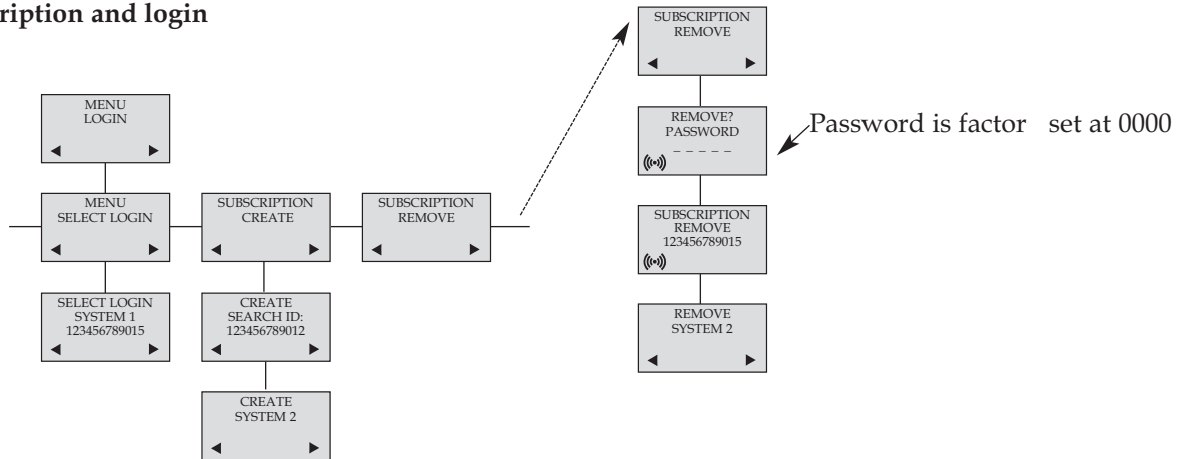

### 7.5.1 Create subscription


To make subscriptions, the system must allow subscriptions to be made. Some systems also require an Access Code (AC). If more than one system currently permits subscription, you will need to know the ID of the system to which you wish to subscribe. Access Codes and system IDs will be provided by the system administrator.

Choose the SUBSCRIPTION CREATE function to subscribe to a new system (see Chap. 7.5/7.5.4).

Use the < and > keys to scroll between the IDs of the different systems available.

During subscription the handset will search for free positions and perform subscription on the first free position.

An alternative position can be chosen using < or >. Enter the AC (if required) using the keyboard, and press ✓.

If the subscription was successful, the startup text will be replaced by the standby text given into the system by the system administrator and  is shown in the display. If not, the subscription has failed and the procedure must be retried.

If the handset is already subscribed to 10 systems, you will have to remove a subscription before creating a new subscription (see Chap. 7.5.3).


## 7.5.2 Login

The handset can be subscribed to 10 different systems enabling you to use the same handset on 10 different systems. If you would like to change to another system, use the Login Menu to connect to another system number. The actual chosen system is marked with a \*.

To change to another system use < or > and press ✓ to confirm.

To be able to log on to a system, subscription to the system has to be established (See Chap. 7.5.1).

Under LOGIN/SELECT LOGIN only subscriptions will be shown. Free positions will not be shown.

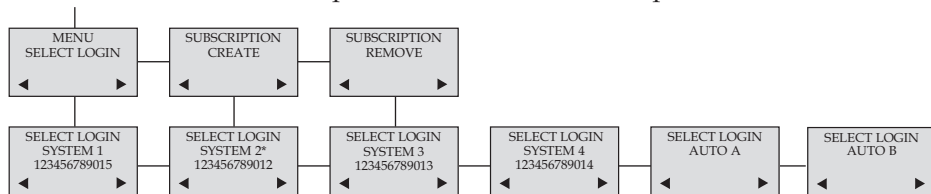

### 7.5.3 Auto login

The handset can be subscribed to 10 different s stems.

If a handset is subscribed to two or more s stems, ou can use Auto Login A to change between the s stems automaticall . The selected s stem is marked with an A .

 
**Please note:** Auto login A should onl be used in separate s stems without overlaps. If a handset looses signal from the s stem (the displa showing OUT OF RANGE ), then after 20 seconds the handset will start searching for an alternative s stem available from the Login list and automaticall change to this s stem. Changing between s stems can onl take place while on hook. An call will be dropped when changing to an alternative s stem.





If a handset is subscribed to two systems only, you can use Auto Login B to change between the two systems automatically. The selected system is marked with a B.

**Please note:** Auto login B can be used in separate systems which are overlapping each other. As soon as the handset has measured a low radio signal 5 times in succession, it will start up the Auto login B procedure and change to an alternative system if available. Changing between two systems can only take place while on hook. An call will be dropped when changing to an alternative system.



### 7.5.4 Remove subscription

Subscriptions can be removed from the system in use and from the 9 other systems (if connected). Removing a subscription requires a password. Password is factory set at 0000. If the system in use is removed, it is necessary either to select one of the remaining systems or to subscribe to a new one. If one of the systems not chosen is removed, the handset remains connected to the system in use.


### 7.5.5 Change startup text

The startup text is predefined as e.g. KIRK telecom as factory default. This can be changed by using the following procedure: Press **\*\*\***, BOOK, ✓ and enter the new startup text using the keyboard followed by ✓. It is possible to insert 24 characters.

## 7.6 Battery capacity

In the Battery Menu it is possible to see the remaining battery capacity. For reading the correct capacity, the handset has to be removed from the charger for at least one hour. Press MENU and use the < or > keys to reach the Battery Menu. Press ✓ to enter the menu, and you can see the current status of the battery capacity. Press ✓ to return to the menu system or press MENU to quit.

The indication on the display is not necessarily an exact reflection on the remaining speech time, but only an indication of the voltage on the battery.

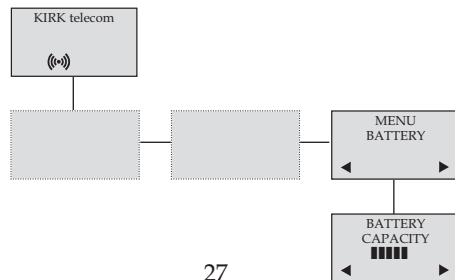

## 7.7 Redial

The handset has maximum 10 redial numbers and 10 Caller ID/MISSED CALL numbers placed in the same stack. Each number is only represented once. Enter the Redial Menu by pressing the <-ke (REDIAL) from the standby state. Repeated presses at the <-ke turn backward through the dialled numbers and CLIP numbers (from newest to the oldest). The >-ke moves in the opposite direction. It is also possible to reach the Redial Menu in the main menu. Numbers are named REDIAL, CLIP or with the name.

The LED will flash slowly and the display shows MISSED CALL if a new number has arrived in the CLIP stack. Press the <-ke (REDIAL) to see the missed call.


If no number (no clip) is represented by a call only the LED will flash slowly afterwards.

If you want to delete a CLIP or a REDIAL you scroll to the name/number and press ✓ twice.

The name/number is now deleted. If number is stored, it is moved to the telephone book. You can also delete all name/numbers using the DELETE ALL? function.

It is possible to edit the CLIP or REDIAL numbers. Find the number you wish to edit and press the digits you want to add to the number, e.g. prefix = 0.

The Redial and CLIP stack Menu (fig)

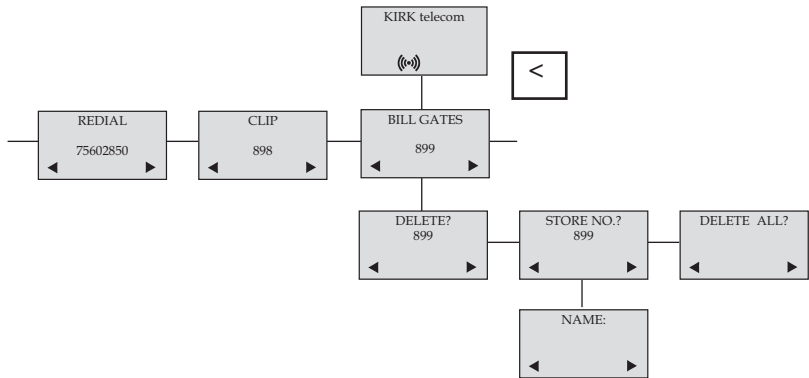



## 7.8 Book


Storing a number (maximum 24 digits) in the telephone book is done by pressing the number to be stored (in on hook), then press the >-key followed by the ✓-key. The book can store up to 200 numbers with name. Typing of the name and a confirmation is required. After storing the telephone will go back to standby mode. If the display shows

MEMORY FULL, it is necessary to delete one or more numbers from the telephone book.

(See menu structure page 31)

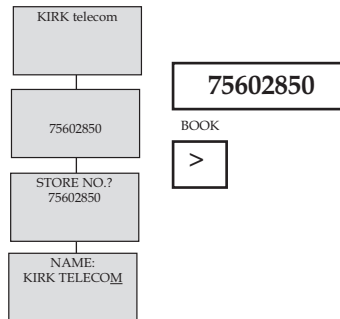


Read BOOK numbers: The telephone book is entered by pressing > (BOOK). For quick-search: press the first letter of the name (using 1-9)(see Chap. 7.2). Call the displayed person by pressing the -key. It is also possible to reach the Phone book Menu in the main menu. Viewing and editing the telephone book can also be done while in conversation.

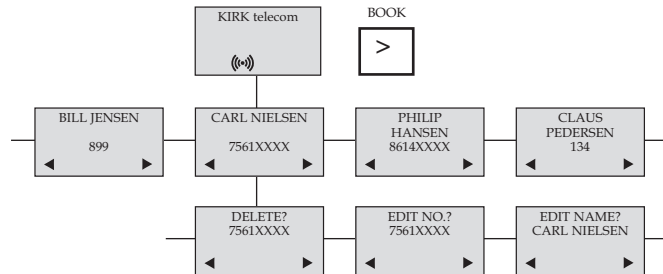

## 7.9 External services



 
External services are features placed in the main system, and only available if the handset is subscribed to a KIRK solution. Under External services can be found; View Clip Stack , Delete Clip Stack and Local Phone Book . The Local Phone Book is a common phone book for all handsets subscribed to the actual system, and all handsets subscribed to the system are listed in the phone book. Additional numbers can be added to the phone book by the system administrator.





## 7.10 MSF Functions

   MSF Functions are special functions, which are based on MSF (Message Service Function). The functions require special software in the main system.




## 7.11 Mail/Text Messages

*Available in systems configured with the possibility of sending text messages*

At the reception of a text message the envelope icon  appears in the display. The envelope icon is indicating one or more unread messages.

The text message is shown in the display, and when the message is read the envelope icon will disappear.

If the message contains a call-back number, this will be displayed on the bottom line of the display. As long as the call-back number is in the display, it is possible to activate the number by pressing the -key.

1st letter in the display, in front of the timestamp, shows the message status: read (R), unread (N) or locked (L).

Mails include a maximum of 72 letters or digits (2 display screens of 36 each). Call-back number is maximum 24 digits (or letters for E-mail).

14 messages can be stored in the handset. When receiving a new message, the oldest unlocked will be deleted. Locked messages will not automatically be overwritten, but can manually be deleted. Maximum 7 messages can be locked.

### Read a mail

Press the R-ke (MAIL) followed by the ✓-ke or enter the Mail Menu (in on hook condition).

If the message includes more than 36 letters or digits, the message will run over 2 display screens.

Use the >-ke to scroll. To see the **sender** of the mail, press the ✓-ke. To leave the mail, press the MENU-ke.

### Reply a mail

Open the mail by pressing the R-ke followed by the ✓-ke, press the ✓-ke again and use the < >-ke s to find the reply feature, press the ✓-ke and you are then able to reply the mail. After writing your reply press the ✓-ke to confirm.

### Forward a mail

Open the mail by pressing the R-ke followed by the ✓-ke, press the ✓-ke again and use the < >-ke s to find the forward feature, press the ✓-ke twice and you are then able to write the number on the receiver. Confirm with the ✓-ke.

### Delete all mail

Open the mail stack by pressing the R-ke followed by the ✓-ke, press the ✓-ke again and use the < >-ke s to find the delete feature, press the ✓-ke and all mails are deleted.

**Delete a mail**

Open the mail by pressing the R-key followed by the ✓-key, press the ✓-key again and use the < > -keys to find the delete feature, press the ✓-key and the mail is deleted.

**Lock/unlock a mail**

Open the mail by pressing the R-key followed by the ✓-key, press the ✓-key again and use the < > -keys to find the lock/unlock feature, press the ✓-key and the mail is locked/unlocked.

**Write a mail**


To write a new mail press the R-key (MAIL), confirm with the ✓-key and write our message. To send the mail press the ✓-key, type the number of the receiver and confirm with the ✓-key.

If one or more mails are stored do as followed: Press the R-key (MAIL) followed by the > -key confirm with the ✓-key and write our message. Press the ✓-key, type the number of the receiver and confirm with the ✓-key. The message is sent.

**Note**

*In case a sent message is not received, the sender will get a message in the display.*

The Mail Menu (fig)

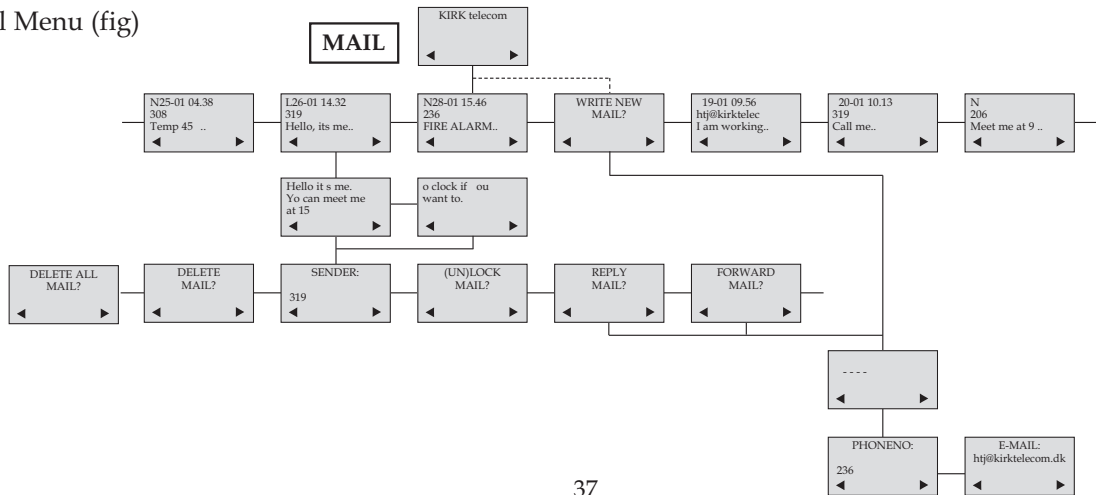

## 7.12 Speed dial

**Please note:** To use the speed dial function it is necessary to set LONG KEY to SPEED DIAL (see Chap 10).

The speed dial list has a maximum of 11 speed dial numbers. Calling a number from the speed dial list is done by pressing the 0,1,2...9 key with a long key press or by pressing the alarm button key. If no number is assigned to the key it is possible to enter a new number. The number is added to the speed dial list automatically.

To store a number (maximum 23 digits) in the speed dial list press MENU and use the < or > keys to reach the Speed dial Menu. Press ✓ to enter the menu. Use the < or > keys to scroll between the list numbers, enter the number and then confirm with ✓. After storing, the telephone will go back to standby mode.

To delete or change a number in the speed dial list press MENU and use the < or > keys to reach the Speed dial Menu. Press ✓ to enter the menu. Use the < or > keys to scroll between the list numbers, press ✓ to select the number in question and then use the < key to delete the existing number. Confirm with ✓ or enter a new number and then confirm with ✓.

## 8. Date and Time Function

The Date and Time function requires the use of a KIRK Wireless Server and special software in the main system. If the Date and Time function is supported, a clock is shown in the display. The clock shows the time with an accuracy of +/- 1 minute.

If the Date and Time function is supported, then date and time of the incoming or outgoing call is also shown in the CLIP/Redial stack on the 4th line of the display. An icon + date and time shows the status of the call.

If the call is missed, the date and time is displayed: ✕ 29/03 20:28


If the incoming call is received, the date and time is displayed: ➔ 29/03 20:28

If the outgoing call is made, the date and time is displayed: 29/03 20:28 ➔

Date and time is only displayed if CLIP feature is supported by the PBX.

## 9. Language

There are 10 predefined languages in the handset: English, German, French, Italian, Spanish, Dutch, Portuguese, Swedish, Danish and Norwegian. Select the required language by pressing the ✓-key. If an 11th language is present this will be shown. This language is a specific dealer language and is factory programmed.

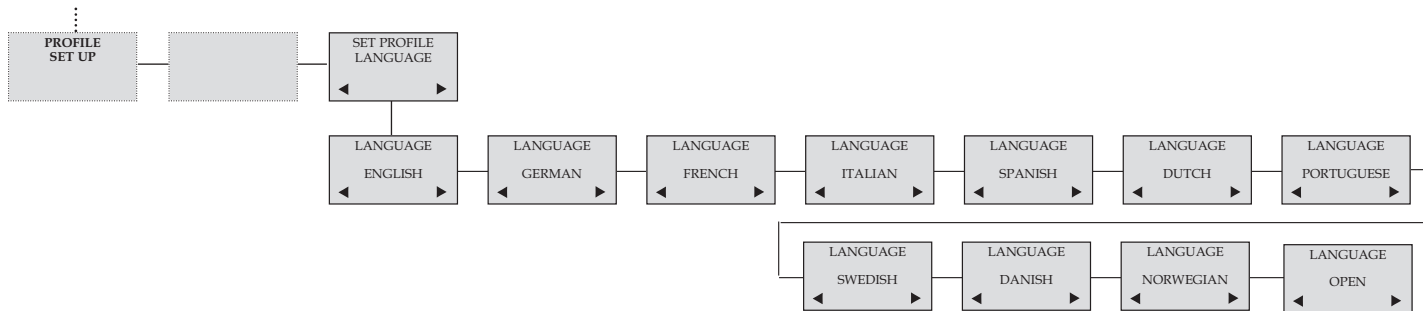



## 10. Advanced settings

**AUTO HOOK:** Can be turned on/off using < and >. Confirm with ✓. When turned on, the handset automatically goes off hook when removed from the charger and a call is present. When placing the handset in the charger, the handset automatically goes on hook.

**ANY KEY ANSW:** Can be turned on/off using < and >. Confirm with ✓. When turned on, all keys work as a Hook key when receiving an incoming call.

**LONG KEY:** Can be set to SEND MSF or SPEED DIAL using < and >. Confirm with ✓. When choosing SEND MSF an MSF is sent to the KIRK Wireless Server when pressing 0,1,2...9 with a long key press or when pressing the alarm key with a long key press. When choosing SPEED DIAL a call is made to the assigned number when pressing 0,1,2...9 with a long key press or when pressing the alarm key with a long key press. If no number is assigned the alarm key it is possible to enter a new number. This number is automatically added to the speed dial list. For more information, see Chap 7.12.

**LONG KEY TIM:** Used to define the time for how long a key (0,1,2...9) should be pressed before it is detected as a long key press.

**A. KEY DELAY:** Used to define the time for how long the alarm key should be pressed before the alarm key function is executed.

**LS ON B-ANSWER:** Can be turned on/off using < and >. Confirm with ✓. When turned on and B-ANSWER ON (hands-free) is selected, the handset turns on the loudspeaker automatically (see Chap. 7.4). (Loudspeaker only works on KIRK 4040).


**STANDBY TEXT:** Can be turned on/off using < and >. Confirm with ✓. When turned off the display shows a local standby text.

**HEADS. ALERT:** The ringer volume in headset can be set to either OFF or 1, 2, 3, 4, 5 (indicated by a bar) using < and >. Confirm with ✓. (only works on KIRK 4040).

**HEADSET VOL:** The volume in headset can be set to either 1, 2, 3, 4 or 5 (indicated by a bar) using < and >. Confirm with ✓. (only works on KIRK 4040).

**OFF HOOK MSF:** Can be set to either NORMAL, KEY CLICK or KEY BEEP using < and >. Confirm with ✓. The OFF HOOK MSF setting only applies to the behaviour of the handset when an MSF is received and the handset is off hook. When set to NORMAL the alert type used is the one defined in the MSF. When set to KEY CLICK a key click is produced when receiving an MSF. When set to KEY BEEP a key beep is produced when receiving an MSF.

## Advanced settings (fig)

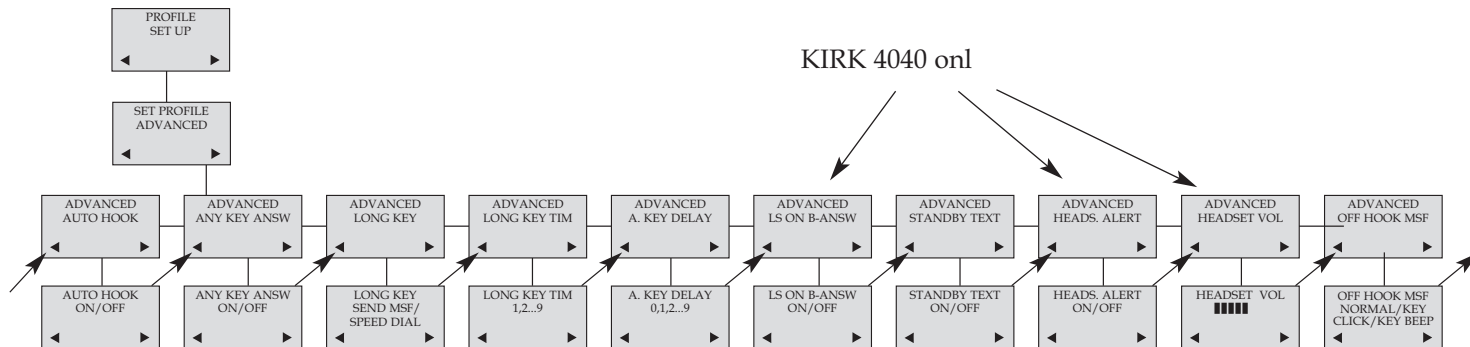

## 11. Shortcuts

KEY LOCKED : Press: MENU \*. (Display shows )

SILENT : Press: MENU #. (No sounds) (Display shows )


PHONE BOOK : Press > (BOOK) in standb

Name search in telephone book: Press the first letter in name and > (BOOK) afterwards

Store a number: Press > (BOOK) after the number (in on hook)

REDIAL and CLIP : Press < (REDIAL) in standb

MAIL : Press R (MAIL) in on hook

MUTE temporarily the ringer: Press  (MUTE) when the telephone is ringing

MUTE the microphone: Press  (MUTE) when the telephone is off hook


RECALL: Press the INT-key if residential system, else press the R-key

Pause(-): Hold \* for one second

Change from pulse to DTMF(T): Hold \* for 2 seconds

## 12. Information

### 12.1 Error tree

Problem	Check
The telephone free es	Remove and replace the batter pack. Press  to turn on the telephone
The telephone does not ring	Check whether the ringer is SILENT or RINGER VOL. is OFF
The telephone cannot find a s stem ID at SUBSCRIPTION CREATE	Check whether the s stem is set to allow subscriptions
The telephone cannot subscribe even if s stem ID has been found	Check if Access Code is necessar
Not possible to turn on the telephone	Check if batter is connected. If es, charge the batter
The telephone turn off when recieving a call and going off-hook	Charge the batter . If still a problem change the batter as it might be defective

## 12.2 Error information

Improper function of the handset might be related to the installation of the KIRK solution or failures related to the main system. Before declaring a handset for repair be sure that the main system is operating properly.

## 12.3 Warranty

The handset is covered by a normal warranty solution, except the battery. The lifetime of the battery depends on the general use of the handset.

The handset is not covered by a general warranty if:

- The handset is exposed to water or metal dust

- The handset is mistreated

- The handset is exposed to unauthorised break-in

## 12.4. Technical information

### Approvals

Acoustics: TBR10  
Electrical: TBR6 (DECT RF)  
Access profile: TBR 22 (GAP)  
EMC: EN 301 489 -1/-6  
EN 301 406  
EN 60950-1  
EN 50371  
EN 61000-3-2  
EN 61000-3-3

### Size and weight

Size: 149 50 28 mm  
Weight: 123 g including batter 10 g

### Capacity

Active talking time 12 hours  
Stand-b time 150 hours

## 12.5 International Regulatory and Product Information



This KIRK product has been marked with the CE mark. This mark indicates compliance with EEC Directives 89/336/EEC, 73/23/EEC 1999/5/EC. A full copy of the Declaration of Conformity can be obtained from Polcom Ltd, 270 Bath Road, Slough, Berkshire, SL1 4DX, UK.

### Česky [Czech]:

Polcom (UK) Ltd tímto prohlašuje, že tento *KIRK 4020 / 4040 handset* je ve shodě se kladnými požadavky a dávámi podmínkami ustanovenými směrnicí 1999/5/ES.

### Dansk [Danish]:

Undertegnede Polcom (UK) Ltd erklærer herved, at følgende udstyr *KIRK 4020 / 4040 handset* overholder de væsentlige krav og øvrige relevante krav i direktiv 1999/5/EF.

### Deutsch [German]:

 
Hiermit erklärt Polcom (UK) Ltd, dass sich das Gerät *KIRK 4020 / 4040 handset* in Übereinstimmung mit den grundlegenden Anforderungen und den übrigen einschlägigen Bestimmungen der Richtlinie 1999/5/EG befindet.



- Eesti [Estonian]:** K esolevaga kinnitab Pol com (UK) Ltd seadme *KIRK 4020 / 4040 handset* vastavust direktiivi 1999/5/E p hin uetele ja nimetatud direktiivist tulenevatele teistele asjakohastele s tetele.
- English:** Hereb , Pol com (UK) Ltd. declares that this *KIRK 4020 / 4040 handset* is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.
- Español [Spanish]:** Por medio de la presente Pol com (UK) Ltd declara que el *KIRK 4020 / 4040 handset* cumple con los requisitos esenciales cualesquiera otras disposiciones aplicables o e igibles de la Directiva 1999/5/CE.
- Ελληνική [Greek]:**  
Pol com (UK) Ltd *KIRK 4020 / 4040 handset*  
1999/5/ .
- Français [French]:** Par la pr sente Pol com (UK) Ltd d clare que l'appareil *KIRK 4020 / 4040 handset* est conforme au e i- gences essentielles et au autres dispositions pertinentes de la directive 1999/5/CE.
- Italiano [Italian]:** Con la presente Pol com (UK) Ltd dichiara che questo *KIRK 4020 / 4040 handset* conforme ai requisiti essen iali ed alle altre disposi ioni pertinenti stabilite dalla direttiva 1999/5/CE.
- Íslenska [Icelandic]:** H r me l sir Pol com (UK) Ltd fir v a *KIRK 4020 / 4040 handset* er samr mi vi grunnkr fur og a rar kr fur, sem ger ar eru tilskipun 1999/5/EC
- Latviski [Latvian]:** Ar o Pol com (UK) Ltd deklar , ka *KIRK 4020 / 4040 handset* atbilst Direkt vas 1999/5/EK b tiskaj m

pras b m un citiem ar to saist tajiem noteikumiem.

- Lietuvių [Lithuanian]:** Iuo Pol com (UK) Ltd deklaruoja, kad is *KIRK 4020 / 4040 handset* atitinka esminius reikalavimus ir kitas 1999/5/EB Direkt vos nuostatas.
- Nederlands [Dutch]:** Hierbij verklaart Pol com (UK) Ltd dat het toestel *KIRK 4020 / 4040 handset* in overeenstemming is met de essenti le eisen en de andere relevante bepalingen van richtlijn 1999/5/EG.
- Malti [Maltese]:** Hawnhekk, Pol com (UK) Ltd, jiddikjara li dan [il-mudel tal-prodott] jikkonforma mal- ti ijjiet essen ja- li u ma provvedimenti o rajn relevanti li hemm fid-Dirrettiva 1999/5/EC.
- Magyar [Hungarian]:** Alul rott, Pol com (UK) Ltd n ilatko om, hog a *KIRK 4020 / 4040 handset* megfelel a vonatko alapve- t k vetelm n eknek sa 1999/5/EC ir n elv eg bel r sainak.
- Norsk [Norwegian]:** Pol com (UK) Ltd erkl rer herved at utst ret *KIRK 4020 / 4040 handset* er i samsvar med de grunnleg- gende krav og vrige relevante krav i direktiv 1999/5/EF.
- Polski [Polish]:** Niniejs m Pol com (UK) Ltd o wiadc a, e *KIRK 4020 / 4040 handset* jest godne asadnic mi w maganiami ora inn mi stosown mi postanowieniami D rekt w 1999/5/WE.
- Português [Portuguese]:** Pol com (UK) Ltd declara que este *KIRK 4020 / 4040 handset* est conforme com os requisitos essenciais e outras disposi es da Directiva 1999/5/CE.
- Slovensko [Slovenian]:** Pol com (UK) Ltd i javlja, da je ta *KIRK 4020 / 4040 handset* v skladu bistvenimi ahtevami in ostalimi

**Slovensky [Slovak]:**

relevantnimi dolo ili direktive 1999/5/ES.

Pol com (UK) Ltd t mto v hlasuje, e *KIRK 4020 / 4040 handset* sp a kladn po iadavk a v etk pr slu n ustanovenia Smernice 1999/5/ES.

**Suomi [Finnish]:**

 
Pol com (UK) Ltd vakuuttaa t ten ett *KIRK 4020 / 4040 handset* t ppinen laite on direktiivin 1999/5/EY oleellisten vaatimusten ja sit koskevien direktiivin muiden ehtojen mukainen.

**Svenska [Swedish]:**

H rmed int gar Pol com (UK) Ltd att denna *KIRK 4020 / 4040 handset* st r I verensst mmelse med de v sentliga egenskapskrav och vriga relevanta best mmelser som framg r av direktiv 1999/5/EG.



The WEEE Marking on this equipment indicates that the product must not be disposed of with unsorted waste, but must be collected separately .



### 12.5.1 Important Safety Instructions

Before using our telephone equipment, you should always follow basic safety instructions to reduce the risk of fire, electrical shock and injury to persons, and damage to property.

1. Read and understand all instructions.
2. Follow all warnings and instructions including those marked on the product.
3. Unplug this product before cleaning. Do not use liquid cleaners or aerosol cleaners. Use damp cloth for cleaning.
4. Do not install the telephone equipment in the bathroom or near a wash bowl, kitchen sink, or laundry tub, in a wet basement, or near a swimming pool.
5. Slots or openings in the equipment are provided for ventilation to protect it from overheating. These openings must not be blocked or covered.
6. The product should be operated only from the type of power source indicated on the instructions. If you are not sure of the type of power supply, consult your dealer or local power company.
7. Do not overload wall outlets and extension cords as this can result in fire or electrical shock.
8. Never push objects of any kind into this product through cabinet slots as they may touch dangerous voltage points or short out parts that could result in fire, electrical shock, or injury. Never spill liquid of any kind into this product.
9. To reduce the risk of electrical shock or burns, do not disassemble this product. Opening or removing covers may expose you to dangerous voltages, dangerous electrical current, or other risks. Incorrect reassembly can cause electrical shock when the appliance is subsequently used. If the product needs repair, consult your dealer.
10. Refer servicing to qualified service personnel.

11. Avoid using telephone during an electrical storm. There may be a risk of electrical shock from lightning.
12. Do not use the telephone to report a gas leak in the vicinity of the leak.
13. Do not place the base or charger near microwave ovens, radio equipment, or non-ground connected televisions. These appliances may cause electrical interference to the base or handset.
14. The charger must be placed on a hard, flat surface and connected to a functional power source.
15. This telephone will not operate in the event of a blackout. Please keep a backup phone for emergencies.
16. Installation must be performed in accordance with all relevant national wiring rules.
17. Plug acts as Disconnect Device - The socket outlet to which this apparatus is connected must be installed near the equipment and must always be readily accessible.

**Intrinsic safety**

Do not use the handset in conditions where there is a danger of electrically ignited explosions.

**Exposure to sunlight, heat and moisture.**

Do not expose the wireless phone to direct sunlight for long periods. Keep the wire-less phone away from excessive heat and moisture.

**Spare parts and accessories**

Use only approved spare parts and accessories. The operation of non-approved parts cannot be guaranteed and may even cause damage.

**Power failure**

In the event of a power failure or flat battery, you cannot use the handset to make or receive calls.

### Battery Precautions

1. Periodically clean the charge contacts on both the charger and handset.
2. Exercise care in handling batteries in order not to short the batteries with conducting materials such as rings, bracelets, and keys. The batteries or conducting material may overheat and cause burns or fire.
3. Do not open or mutilate the batteries. Released electrolyte is corrosive and may cause damage to the eyes or skin. The electrolyte may be toxic if swallowed.
4. During charging batteries heat up. This is normal and not dangerous.
5. Lithium cell installation Caution -Danger of Explosion if Battery is incorrectly replaced. Replace only with the same or equivalent type recommended by the manufacturer. Dispose of used batteries according to the manufacturer's instructions.

**Note:** This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to local regulations. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

**FCC Note:** This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. In accordance with part 15 of the FCC rules, the user is cautioned that any changes or modifications not approved by the FCC or the Federal Communications Commission could void the user's authority to operate the equipment.

**SAR:** Device has been tested for SAR compliance for head and body worn configurations. The highest reported SAR values are: 4020: 0.037 W/kg head, 0.01 W/kg body and 4040: 0.037 W/kg head, 0.01 W/kg body.

**IC Note:** Operation is subject to the following two conditions: (1) This device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device. The Term "IC": before the certification/ registration number only signifies that the Industry Canada technical specifications were met.

Privacy of communications may not be ensured when using this telephone.

This Class [B] digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe [B] est conforme à la norme NMB-003 du Canada.

**Power Outage:** In the event of a power outage, your wireless telephone will not operate. The wireless telephone requires electricity for operation. You should have a telephone which does not require electricity available for use during power outages.

**Information to user:** The user's manual or instruction manual for an intentional or unintentional radiator shall caution the user that changes or modifications not approved by the part responsible for compliance could void the user's authority to operate the equipment.

**NOTE EMC:** Cet appareil a été soumis à un essai et jugé conforme aux normes régissant les limites tabulées pour un dispositif numérique de classe B, conformément aux règlements locaux. Ces limites visent à assurer une protection raisonnable contre des interférences pouvant nuire à l'appareil utilisé dans un secteur résidentiel. Cet équipement génère et utilise des radiofréquences, et peut en émettre. S'il n'est pas installé et utilisé selon les directives fournies, il risque de perturber les radiocommunications. L'exploitation de cet appareil dans un secteur particulier est toutefois susceptible de produire des interférences nuisibles. Si cet équipement provoque des interférences lors de la réception des radiofréquences ou des fréquences de télévision, ce qui peut être vérifié en mettant l'appareil hors tension, puis en le remettant sous tension, l'utilisateur doit prendre l'une des mesures suivantes pour corriger la situation:

- réorienter ou relocaliser l'antenne de réception;
- augmenter la distance entre l'appareil et l'antenne de réception;
- brancher l'appareil sur une prise d'un circuit différent de celui auquel l'antenne est branchée;
- consulter le détaillant ou un technicien en radiotélévision d'expérience pour obtenir de l'aide.



## 12.5.2 Limited Warranty

This limited, non-transferable warrant is provided to the original purchaser. The product is warranted to be free from defects in materials and workmanship under normal installation, use and service for a period of one (1) year from the date of purchase as shown on the purchaser's receipt. Our obligation under this warrant is limited to repair or replacement (at our option) of the product or an part(s) which are defective provided that the product is returned to the original place of purchase or an authorized service location during the warrant period. Products returned must be accompanied by a copy of the purchase receipt. In the absence of a purchase receipt, the warrant period shall be one (1) year from the date of manufacture. Repair or replacement of the product is our sole and exclusive remedy.

If the product is repaired, reconditioned component parts or materials may be used. If the product is replaced, we may replace it with a new or reconditioned product of the same or similar design. The repaired product will be warranted for either (a) 90 days or (b) the remainder of the original one (1) year warrant period, whichever is longer.

This warrant does not apply to the defects outside of our control, including but not limited to acts of God, fire, flood and damage while in transit to service facility. We do not warrant that the product will be compatible with an telephone equipment, systems or part lines.

 
 
 
 
This warrant shall be void if the product is damaged as a result of defacement, misuse, abuse, neglect, accident, destruction or alteration of the serial number, improper electrical voltages or currents, repair, alteration or maintenance by an person or part other than our authorized service facility, or an violation of instructions furnished by us.

 
This warrant is also void if this product is removed from the country in which it was purchased by the original purchaser, if it

is used in a country in which it is not registered for use, or if it is used in a country for which it was not designed. Due to variations in telephone systems and communications laws, this product may be illegal for use in some countries. We assume no responsibilities for damages or penalties incurred resulting from the use of this product in a manner or location other than that for which it was intended.

THIS LIMITED WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES EXPRESS OR IMPLIED. ANY IMPLIED WARRANTIES INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED TO THE DURATION OF THIS WRITTEN LIMITED WARRANTY. WE DISCLAIM ANY LIABILITY FOR DAMAGES FOR LOSS OF USE OF THE PRODUCTS, LOSS OF TIME, INCONVENIENCE, INJURY TO ANY PERSON, OR DAMAGE TO PROPERTY CAUSED BY THE PRODUCT, LOSS OF REVENUE OR PROFIT OR DAMAGES FOR ANY FAILURE TO PERFORM. IN NO EVENT SHALL WE BE LIABLE FOR ANY SPECIAL, INCIDENTAL, PUNITIVE OR CONSEQUENTIAL DAMAGES EVEN IF WE ARE ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you. This warranty is the sole and exclusive warranty provided for the product. There are no other express warranties. This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state.





2007 Pol com, Inc. All rights reserved.

*Specifications subject to change without notice.*

**Polycom Headquarters**  
4750 Willow Road  
Pleasanton  
CA 94588 (T)

**Polycom (Denmark)**  
Langmarksvej 34  
DK-8700 Horsens  
Tel. +45 7560 2850  
Fa +45 7560 2851  
emeadk@pol com.com  
www.pol com.com

